
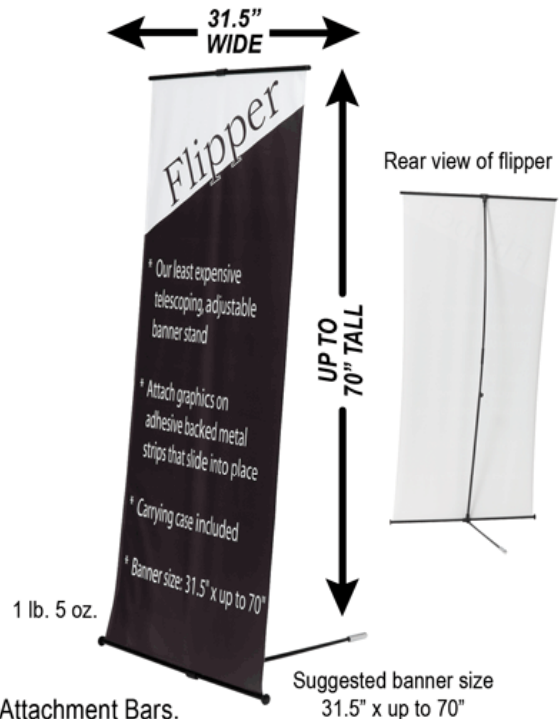





Flipper **BANNER STANDS**

Instructions:

1. Items 'A' are the Banner Attachment Bars.
2. Item 'B' is the Top Pole with T-Bar connector for the Top Banner Attachment Bar.
3. Item 'C' is the Telescoping Pole that connects the Top Pole to the Bottom Pole.
4. Item 'D' is the Bottom Pole with T-Bar connector for the Bottom Banner Attachment Bar and the Height Adjusting Screw that allows part 'C' (the telescoping pole), to adjust the total height of the graphic.

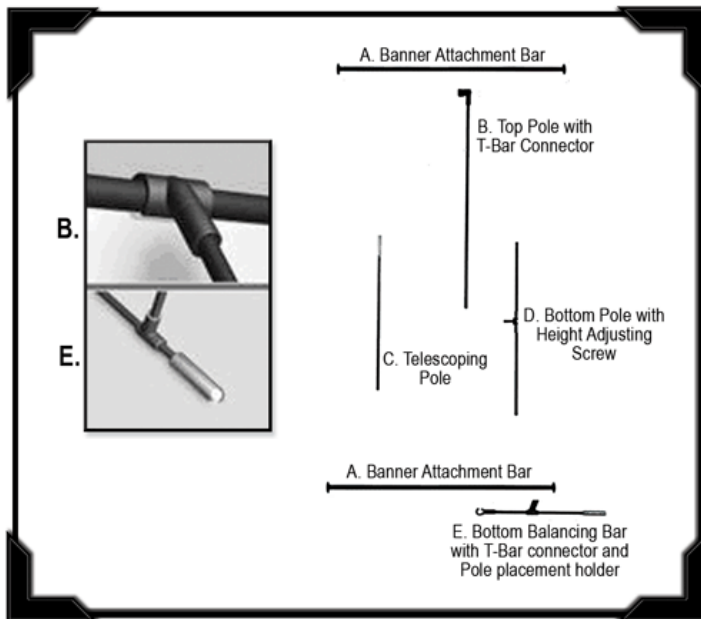

1. Remove the plastic End Caps from either end of the Banner Graphic Attachment Bars.
2. Withdraw the adhesive-backed plastic strips which are inside the Bars, as shown in insert A.
3. Align the graphic onto the adhesive-backed plastic strips, as shown in insert B.
4. Attach the back of the graphic to the front of the adhesive-backed plastic strips.
5. After the graphic has been attached to the adhesive strips, slide the adhesive strips with the graphic back into the Banner Graphic Attachment Bars, as shown in insert C.
6. Connect the three poles (height adjustment should be the last step).
7. Slide the Bottom Banner Graphic Bars into the bottom T-Bar Connector.
8. Connect the top and bottom poles.
9. Slide the Top Banner Graphic Bars in the top T-Bar Connector and adjust the height as needed.
10. Recap the Banner Graphic Attachment Poles with the plastic End Caps.

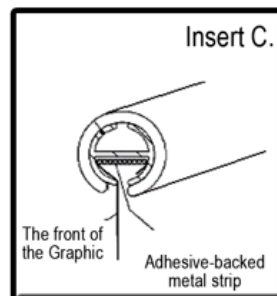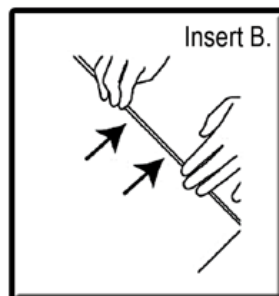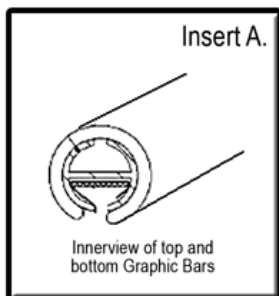

FELLERS
America's Largest Vinyl Sign Supply Company

Ph: 1-800-654-8405 Fax: 1-888-405-4548
sales.service@fellers.com